

L.E.D. FOOTBALL

Care Instructions

Item No: HP10047



 
 
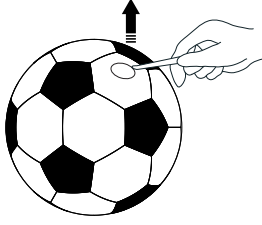
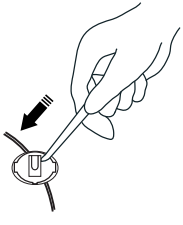
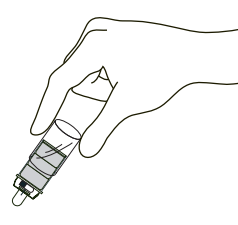
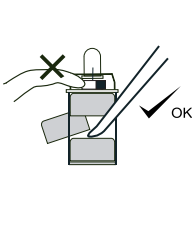
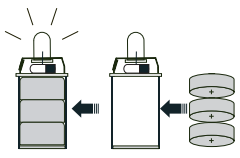
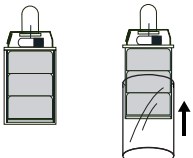
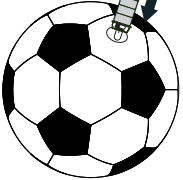
WARNING! Not suitable for children under 3 years due to small parts – Choking hazard.
Warning. Adult assembly and supervision required.
Remove all packaging material before giving this product to children.
Instruction sheet and packaging must be retained since it contains important information.
Requires 6 x AG13/LR44 batteries (included).
The football must only be inflated by, and batteries replaced by an adult. Inflate with a hand pump (included).
Warning: This toy produces flashes that may trigger epilepsy in sensitised individuals.



BATTERY WARNING:
Should not connect to more than the recommended number of batteries.
Non-rechargeable batteries are not to be recharged.
Rechargeable batteries are only to be charged under adult supervision.
Rechargeable batteries are to be removed from the toy before being charged.
Different types of batteries or new and used batteries are not to be mixed. Batteries are to be inserted with the correct polarity.
Exhausted batteries are to be removed from the toy.
The supply terminals are not to be short-circuited.
Warning: Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

TO REPLACE THE BATTERIES:

PLEASE NOTE: THE BALL CONTAINS 2 LIGHTS.

ITEMS REQUIRED: TOOL INCLUDED:  BATTERIES REQUIRED: 6 x NEW AG13/LR44 (3 per Light Unit) 	 STEP 1: Please deflate the ball and insert the tool into the edge of the caps and prise open the caps.	 STEP 2: Use the hook side of the tool to pull out the Light Units.	 STEP 3: Pull off the transparent tubes from the Light Units.	 STEP 4: Use the tool to push the batteries out of the battery compartment. Don't touch the electric board with your fingers.
 STEP 5: Replace all the batteries according to the correct polarity (+ and -).	 STEP 6: Replace the transparent tubes back onto the Light Units.	 STEP 7: Insert the Light Units back into the ball and push them down.	 STEP 8: Carefully reinsert the caps back into the holes. Use your thumb to push the caps down.	 STEP 9: Use the tool if necessary to adjust the cap securely into place.

You need help? For spare parts information and technical support, visit our website at www.hyprosports.com, or email us on info@hy-pro.co.uk